

A	REMOVE EXISTING TRAFFIC DELINEATION, MARKINGS AND SYMBOLS.
B	SAWCUT AND REMOVE EXISTING ISLAND AND ISLAND NOSE FROM CROSSWALK PATH.
C	REMOVE AND SALVAGE SIGN(S).


1. ALL LANE LINE DIMENSIONS ARE TO LIP OF GUTTER OR FACE OF MEDIAN ISLAND UNLESS OTHERWISE NOTED.

1. INSTALL TYPE 1 CENTERLINE AS PER USD. DWG. #244.
2. INSTALL TYPE 2 CENTERLINE AS PER USD. DWG. #244.
3. INSTALL TURN LANE LINE (RPM) AS PER USD. DWG. #246.
4. INSTALL TYPE 4 LANE LINE AS PER USD. DWG. #244.1.
5. INSTALL 6" SOLID WHITE LINE (T-2 FILM) AS PER USD. DWG. #244.9.
6. INSTALL WHITE T-2 FILM SCHOOL CROSSWALK PER USD. DWG. #254.1.51.
7. INSTALL WHITE T-2 FILM CROSSWALK PER USD. DWG. #254.
8. INSTALL WHITE T-2 FILM STOP BAR PER USD. DWG. #254.
9. INSTALL WHITE T-2 FILM "ARROW" SYMBOL PER MUTCD 2009 PART 3 AND USD. DWG. #246.
10. INSTALL 8" WHITE SKIP LINE (T-2 FILM) (3' SEGMENTS AND 9' GAPS).
11. INSTALL WHITE T-2 FILM "ONLY" LEGEND PER MUTCD 2009 PART 3 AND USD. DWG. #246.5.
12. INSTALL TRAFFIC LOOP DETECTOR AS PER USD. DWG. #826, 827, 828, AND 834.
13. INSTALL WHITE T-2 FILM STRIPING PER USD. DWG. #245.

14	INSTALL TRANSITION SECTION (T-2 FILM) AS PER USD. DWG. #245 (3 OF 3).
15	INSTALL TRANSITION SECTION (T-2 FILM) AS PER USD. DWG. #245 (2 OF 3).
16	INSTALL FORCED TURN LANE LINE (RPM) AS PER USD. DWG. #246.6.
17	INSTALL YELLOW MEDIAN NOSE MARKINGS AS PER USD. DWG. #248.
18	INSTALL MEDIAN ISLAND NOSE NOT TO ENCROACH INTO CROSSWALK PATH.
19	INSTALL FIRE HYDRANT MARKER PER CITY OF LAS VEGAS FIRE CODE.
20	INSTALL RIGHT TURN ONLY LANE PER MUTCD 2009 PART 9 FIG. 9C-4.
21	INSTALL 6" WHITE SKIP LINE (T-2 FILM) AS PER USD. DWG. #244.9.
22	INSTALL WHITE T-2 FILM BICYCLE SYMBOL PAVEMENT MARKING PER MUTCD 2009 PART 9 FIG. 9C-3 AND USD. DWG. #244.9.
23	INSTALL WHITE MEDIAN NOSE MARKINGS AS PER USD. DWG. #248.
24	INSTALL NEW SIGN(S) (POLE MOUNTED).
25	INSTALL NEW SIGN(S) (GROUND MOUNTED).
26	INSTALL T-2 FILM "U-TURN ARROW" SYMBOL (SEE DETAIL A, DRAWING ST-07).

27. INSTALL CAT TRACKS (RPM) (SEE DETAIL B AND 1, DRAWING ST-07).
28. PAINT MEDIAN ISLAND WHITE.
29. INSTALL WHITE K71 SELF-ERECTING MARKER POST.
30. INSTALL TYPE I CENTERLINE AS PER USD DWG. #244.
(ALL PAUREMENT MARKERS SHALL BE WHITE)
31. INSTALL 4" SOLID WHITE LINE (T-1 FILM).
32. REMOVE AND RESET SIGN(S).
33. INSTALL 8" SOLID WHITE LINE (T-2 FILM).

EXISTING SIGN TO REMAIN IN PLACE.

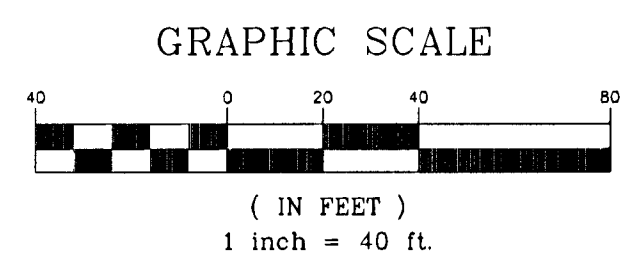

MATCHLINE "BD" 95+50.00
SEE SHEET ST-05

TITLE: **BUFFALO DRIVE
CHARLESTON BLVD TO LAKE MEAD BLVD**

STRIPING PLAN
"BD" 71+50.00 TO "BD" 95+50.00

[illegible]

BUFFALO DRIVE-CHARLESTON BLVD TO LAKE MEAD BLVD

DATE: 8/1/12

DESIGNED BY: MDM
DRAWN BY: JAS
CHECKED BY: MDM