


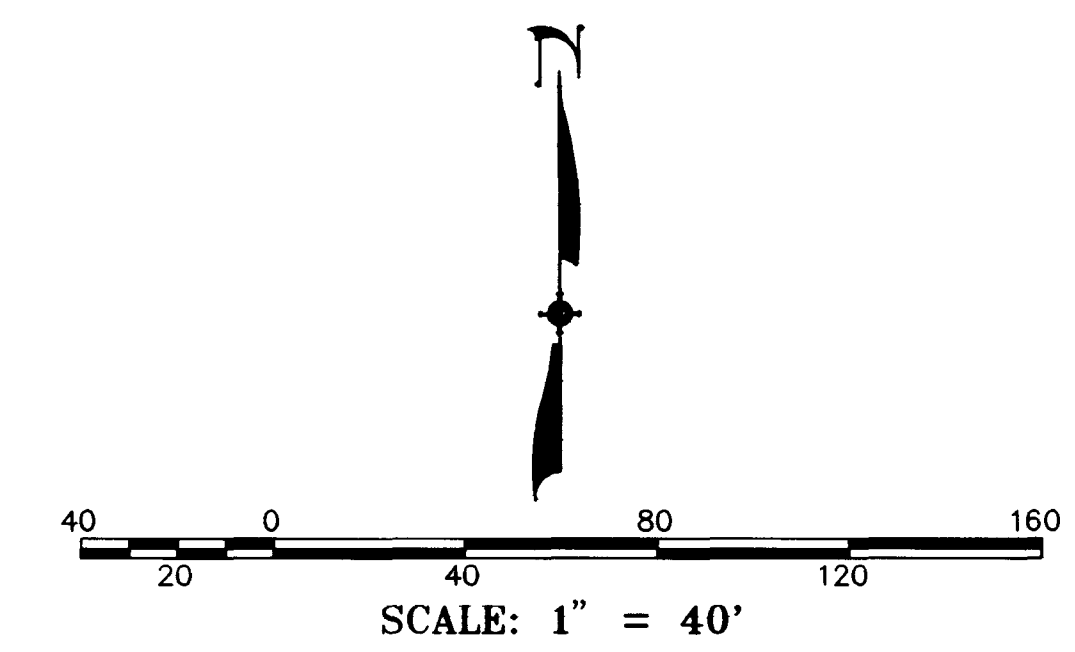

- ① RELOCATE EXIST R1-1
- ② INSTALL CENTERLINE TRANSITION PER STD DWG NO 245
(2 OF 3)
- ③ INSTALL LEFT TURN STORAGE LANE LINE
- ④ INSTALL TYPE I CENTERLINE
- ⑤ INSTALL 4" WIDE WHITE PAINTED EDGE LINE
- ⑥ INSTALL 24" WIDE COLD POLYMER FILM STOP BAR

Avoid cutting underground utility lines. It's costly.

**Call
before you
Dig**

1-800-227-2600
UNDERGROUND SERVICE (USA)

