



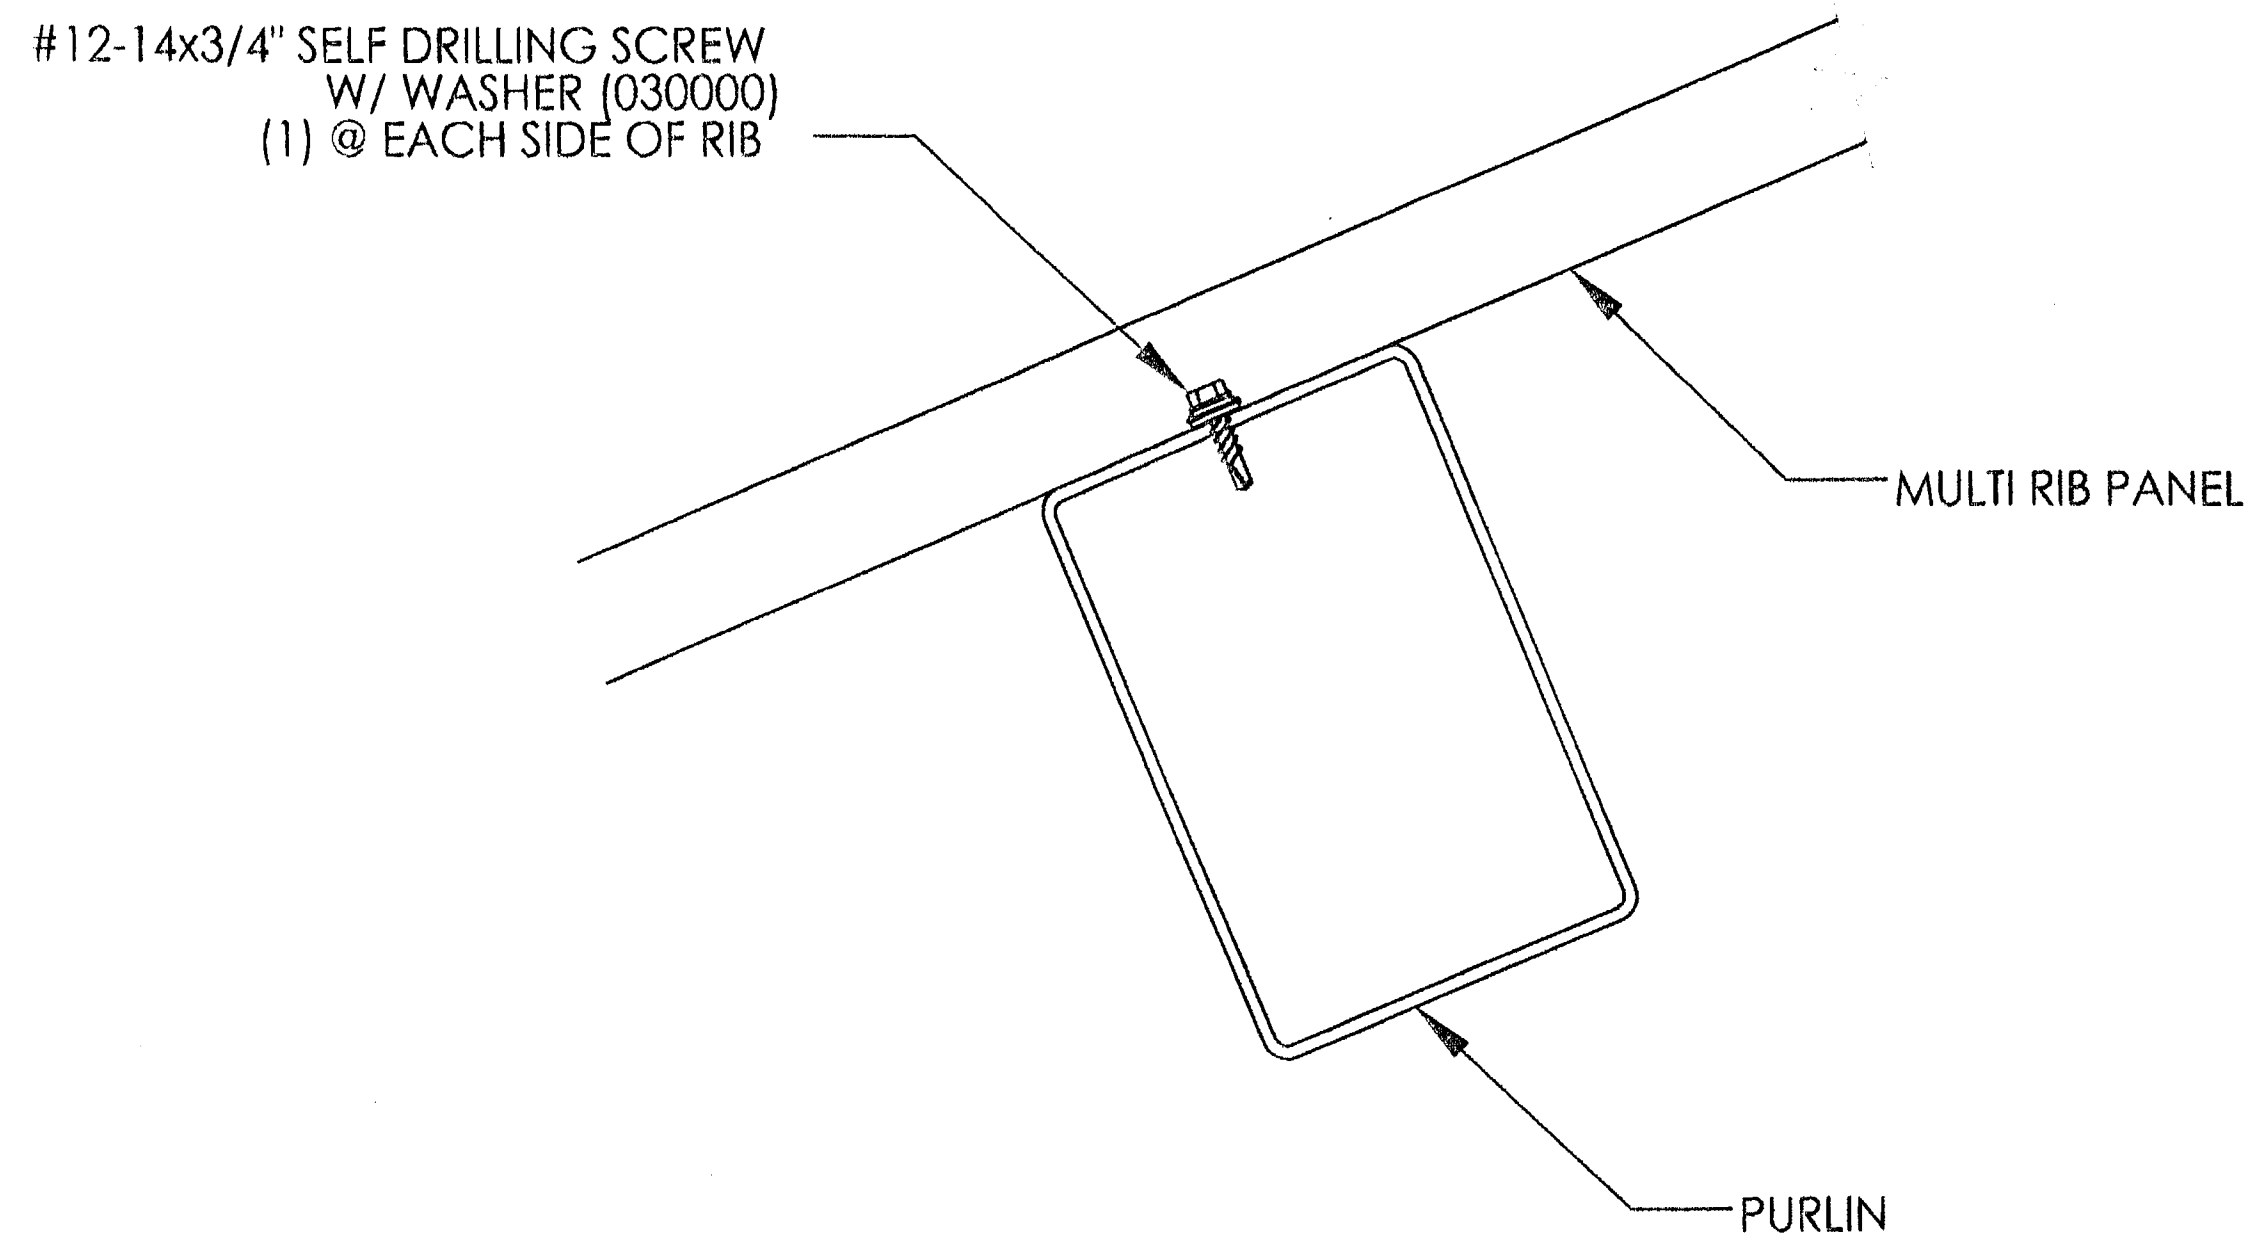


SECTION @ PURLIN

MR-600

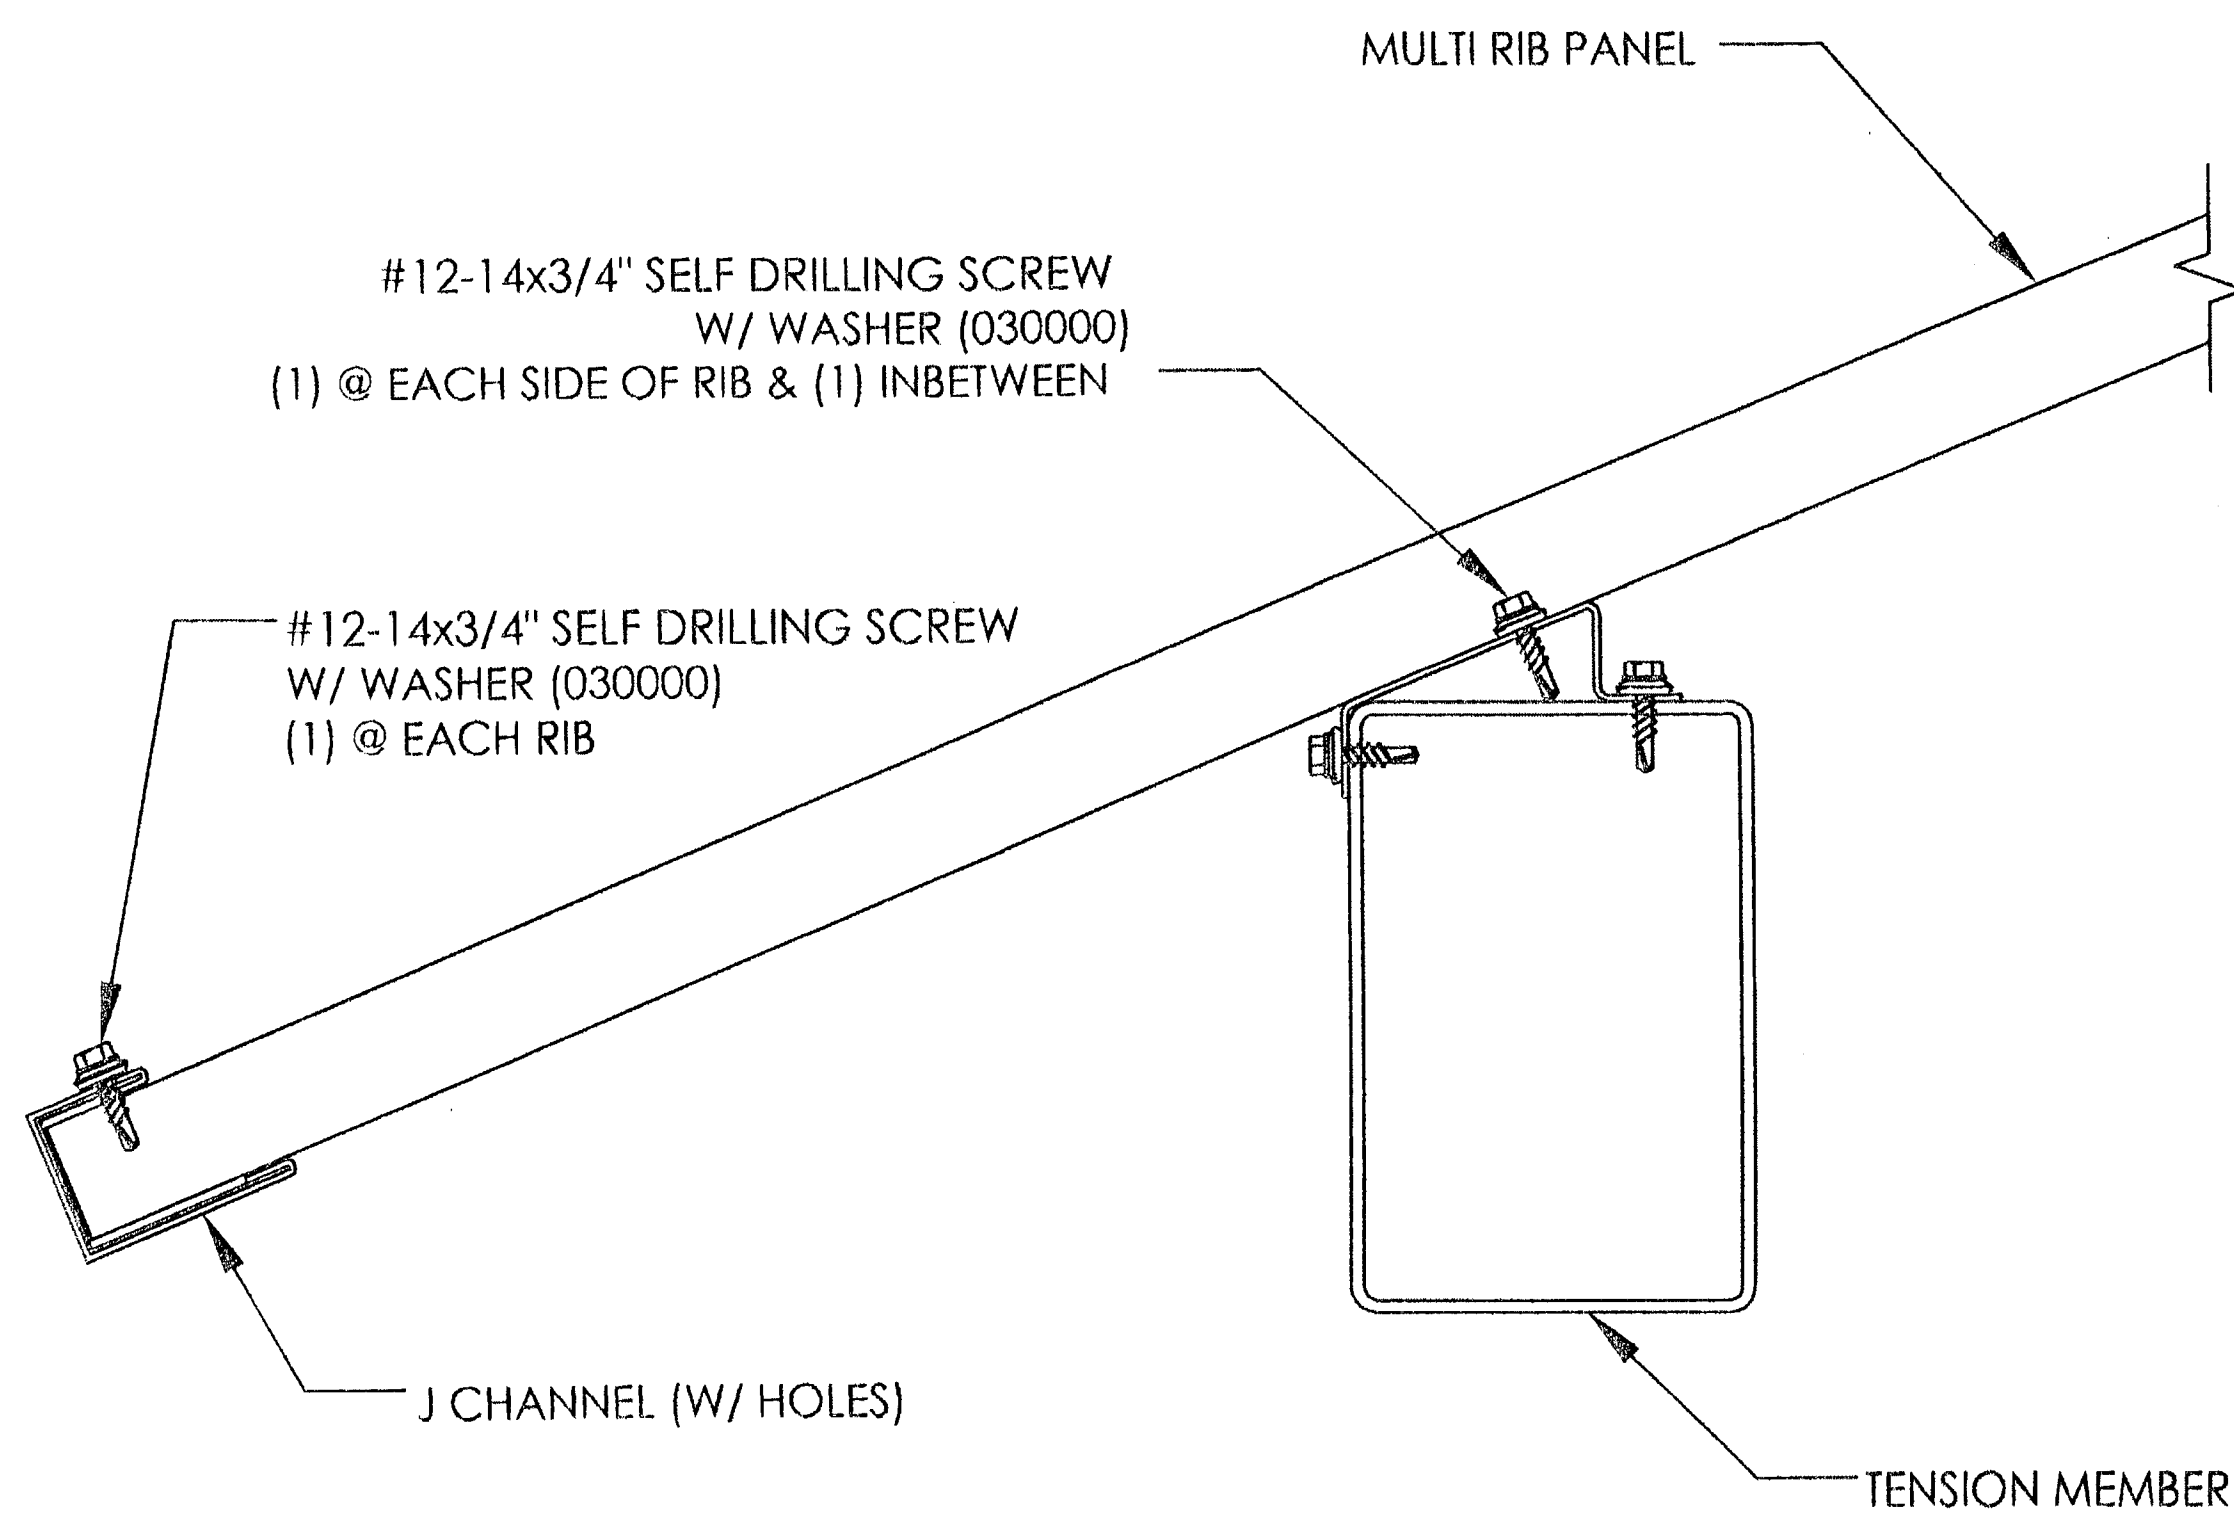

SECTION @ TENSION MEMBER

MR-100

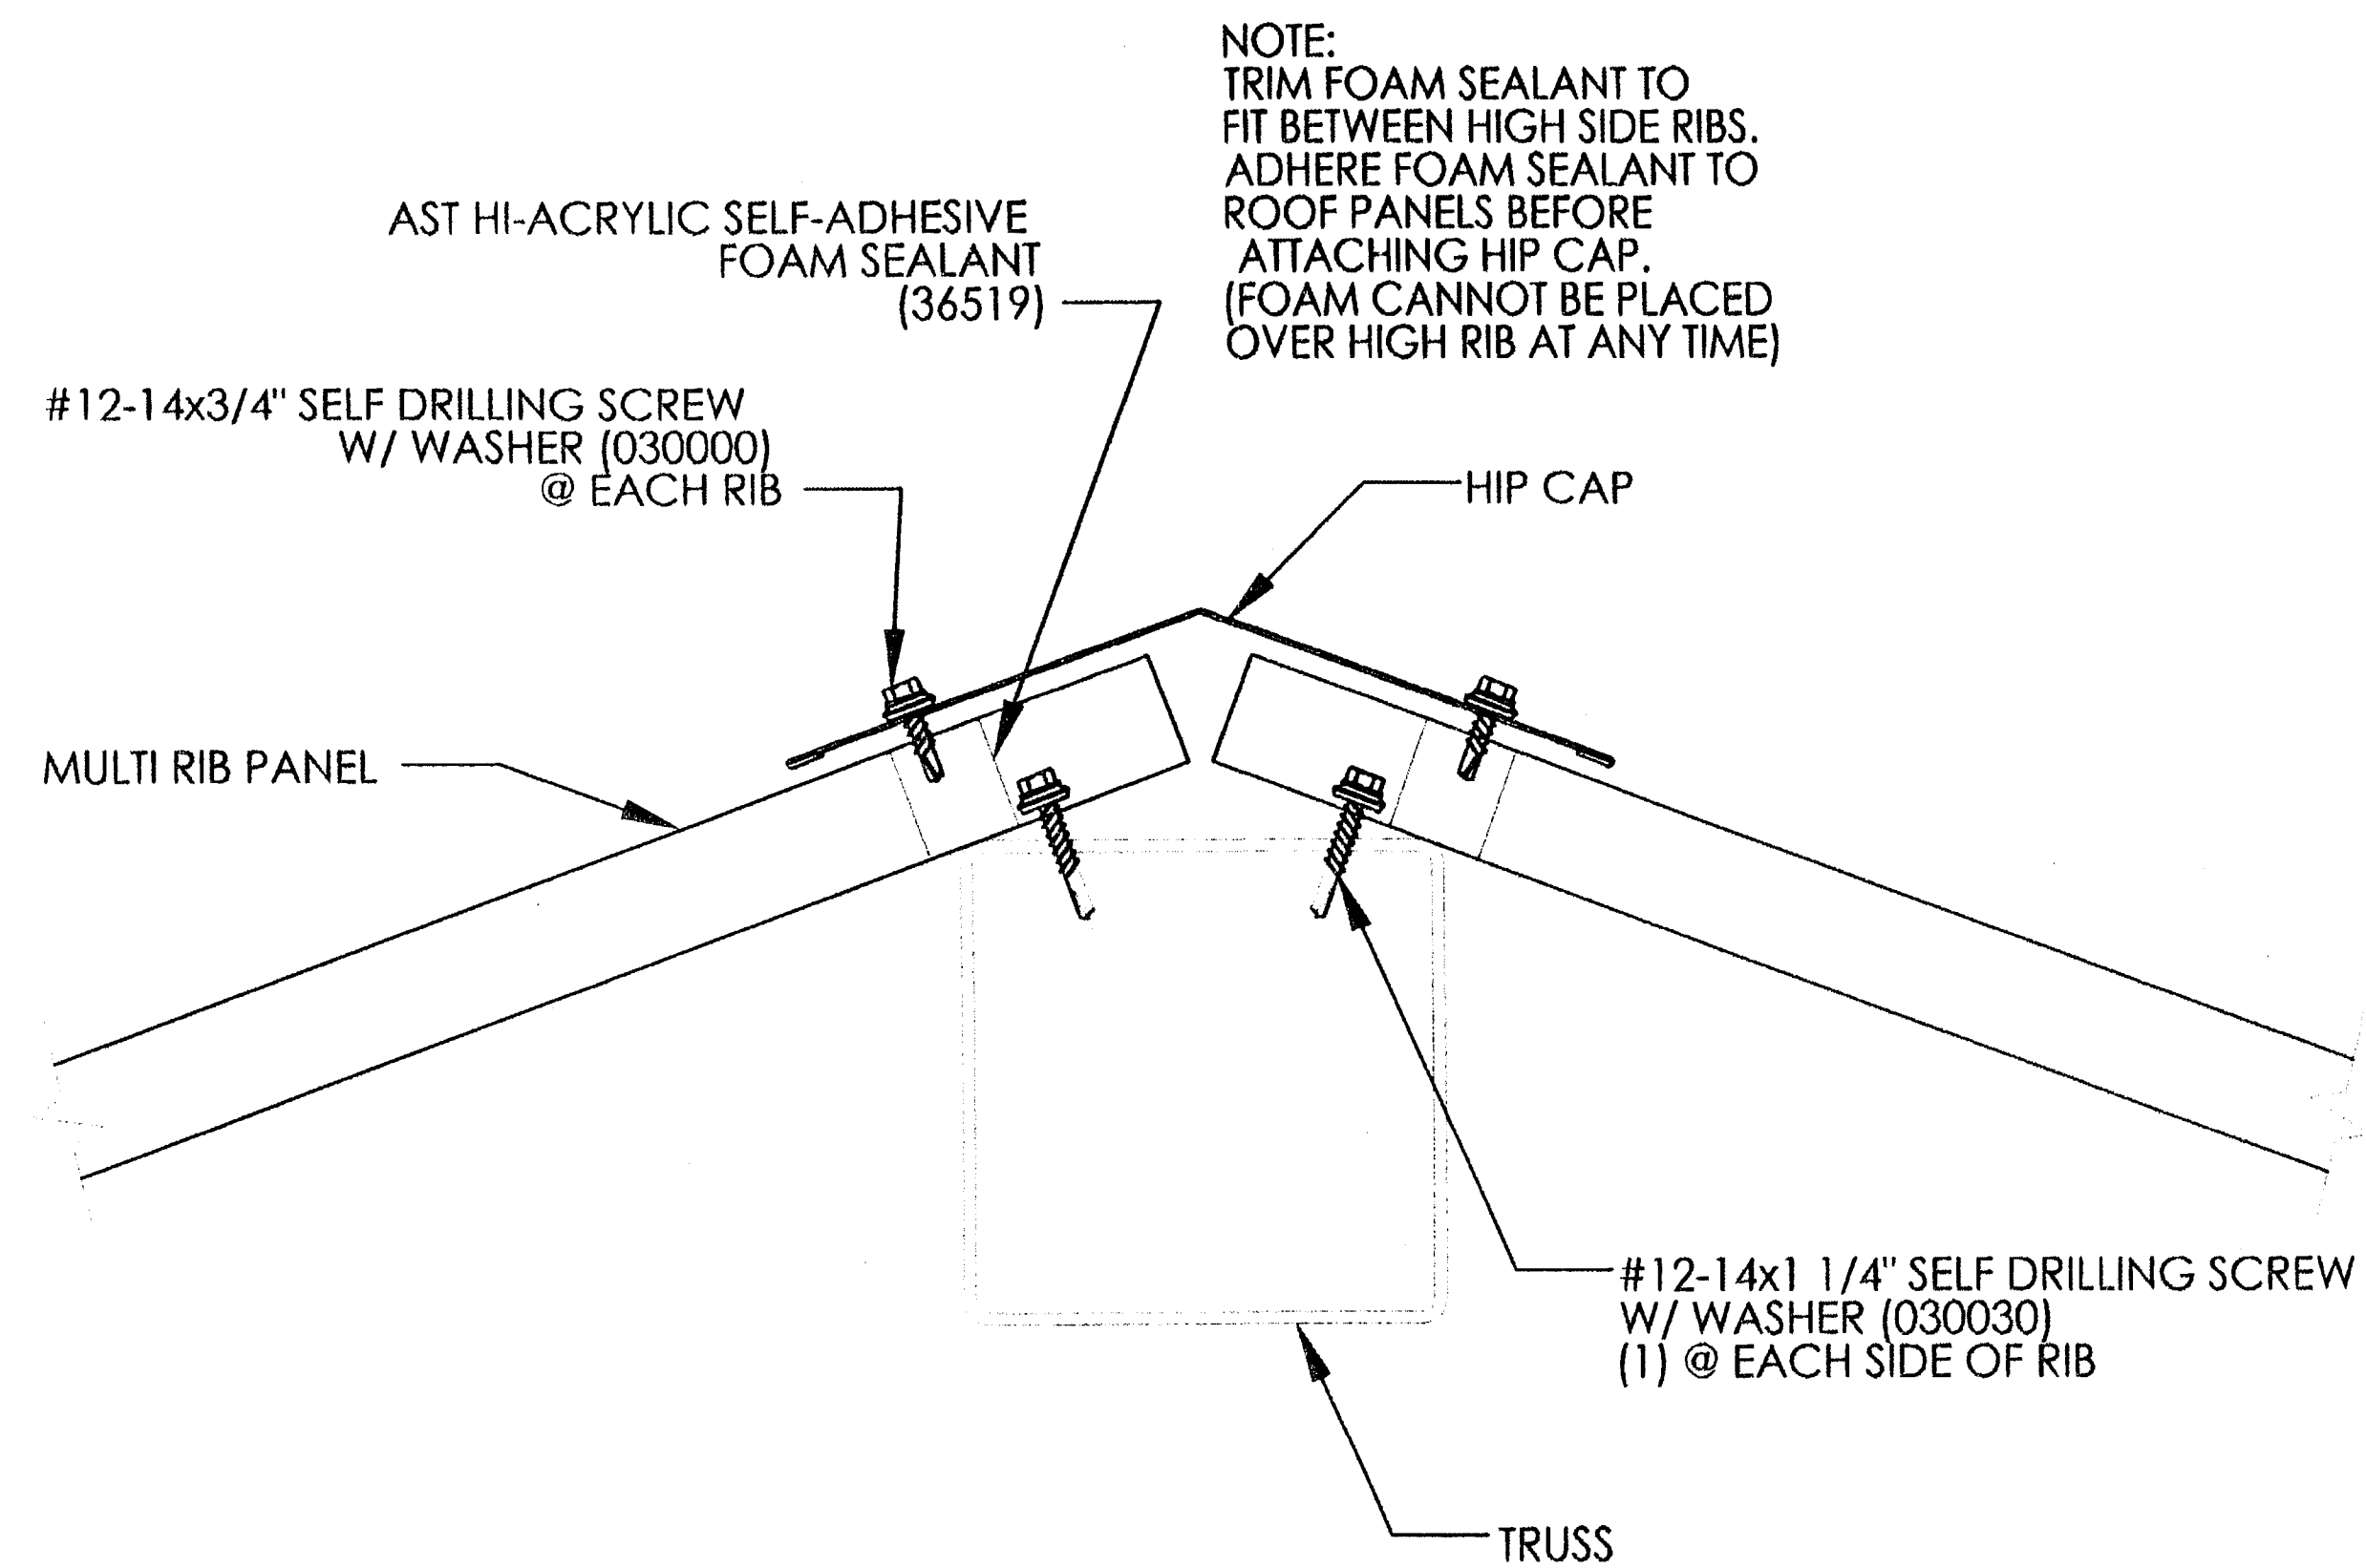

SECTION @ TRUSS

MR-300

NOTE:
ATTACH ROOF PEAK CAP TO RIBS &
RIDGE CAP WITH #12-14x3/4" SELF
DRILLING SCREW. (030000)

030000
#12-14x3/4" SELF DRILLING SCREW.

030030
#12-14x1 1/4" SELF DRILLING
SCREW.
(NOTE: USE ONLY TO FASTEN ROOF
AT THE RIDGE TO THE TRUSS OR
RIDGE BEAM.)

030105
1/8"x" POP RIVET
USE TO ATTACH THE COVER
PLATES.

NOTE:
ALL MATERIALS ARE CALLED
OUT ON SHEET 4.

PATENTED AND/OR PATENTS PENDING COPYRIGHT 2006 PORTER CORP HOLLAND, MI 49424

PROJECT: SANDHILL OWEN PARK & TRAILHEAD
PROJECT LOCATION: HENDERSON, NV 89074

DRAWING: ROOF CONNECTION DETAILS

CAD MODEL: HXE-20-F1-B2-46542

CREATION DATE: 5/27/2009
DRAWN BY: briste
JOB NO: 46542
SCALE: 1:1

poligon[®]
ARCHITECTURE
PARK
800-354-7721
www.poligon.com
by PORTER CORP
PORTER CORP 4240 N. 136th AVE HOLLAND, MI 49424

SHEET

PR.09

THIS SEAL PERTAINS ONLY TO THE MATERIALS SUPPLIED BY POLIGON.
THIS SEAL DOES NOT SERVE AS - OR REPRESENT - THE PROJECT
ENGINEER OF RECORD AND SHALL NOT BE CONSTRUED AS SUCH.

123269