


#12-14x3/4" SELF DRILLING SCREW
W/ WASHER (030000)
(1) @ EACH SIDE OF RIB

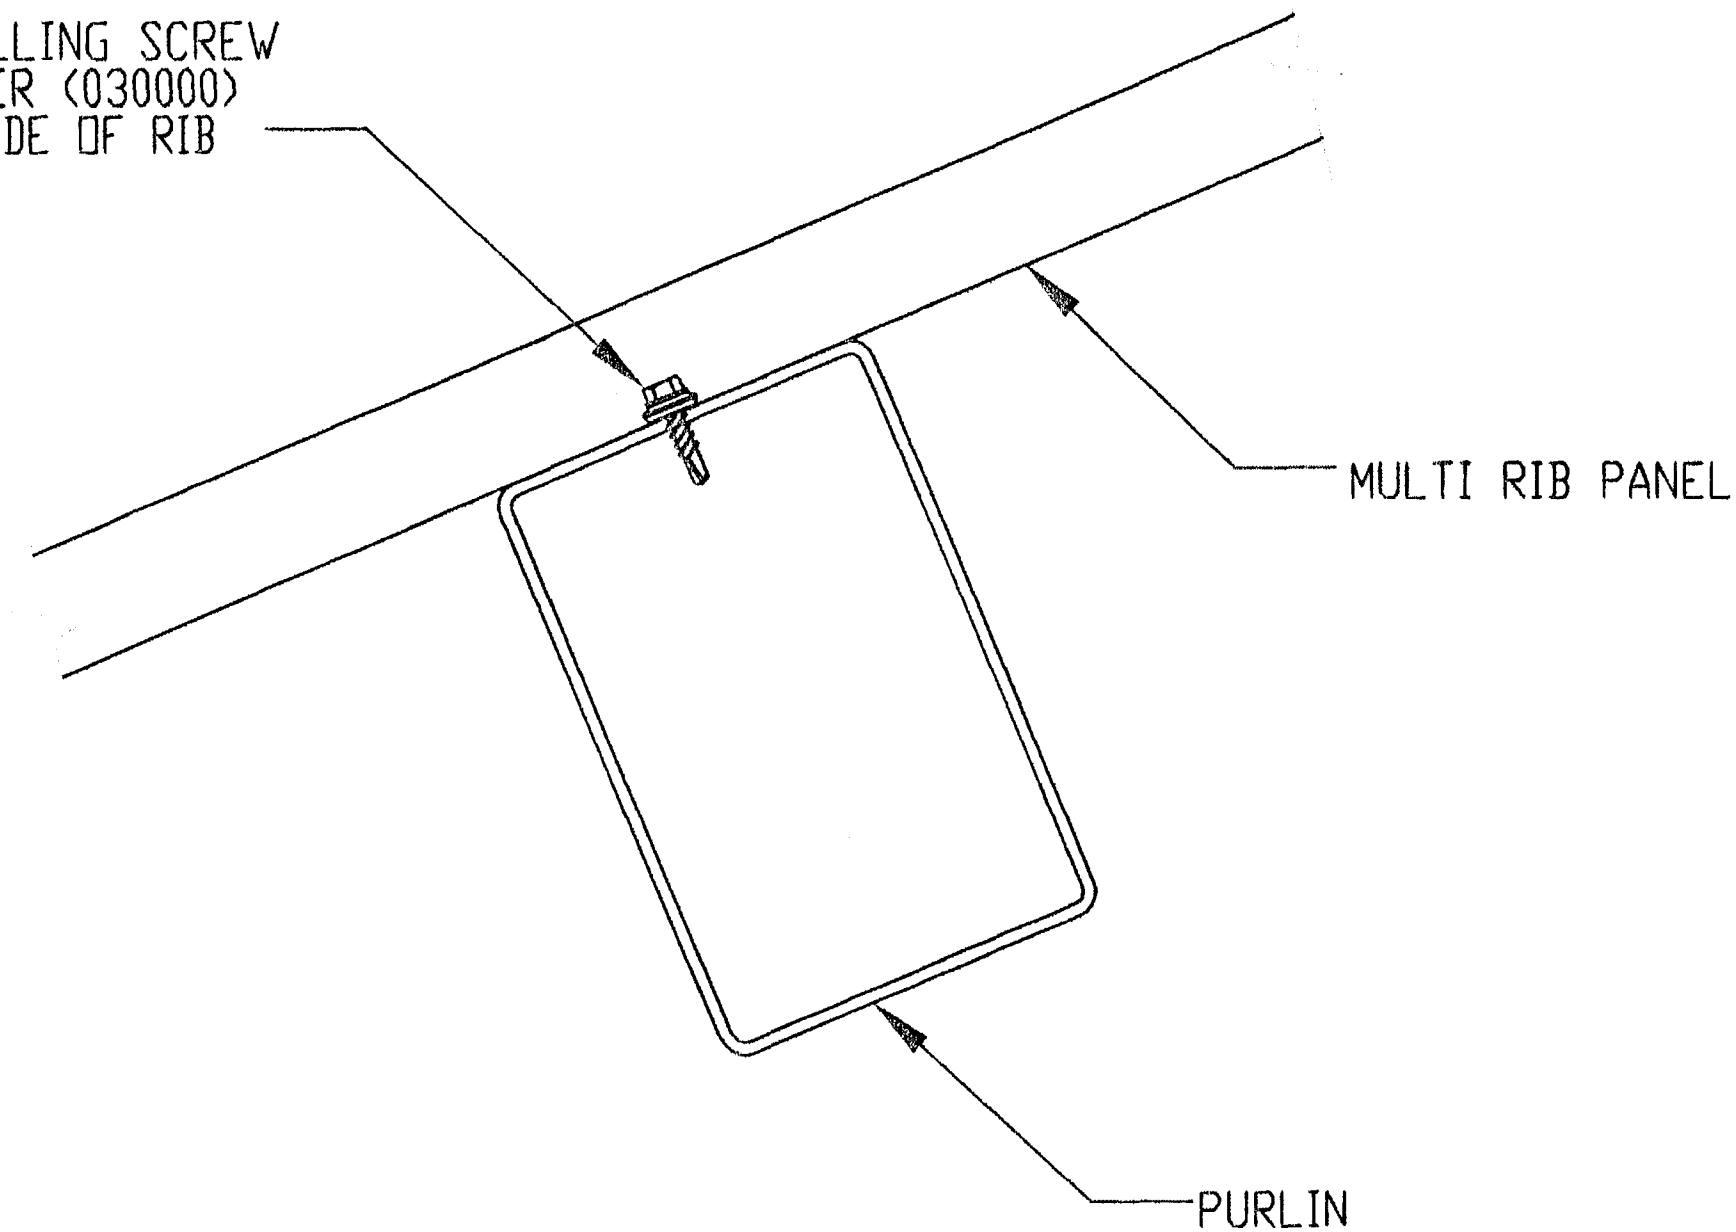


SECTION @ PURLIN

MR-600


#12-14x3/4" SELF DRILLING SCREW
W/ WASHER (030000)
(1) @ EACH SIDE OF RIB & (1) IN BETWEEN

#12-14x3/4" SELF DRILLING SCREW
W/ WASHER (030000)
(1) @ EACH RIB

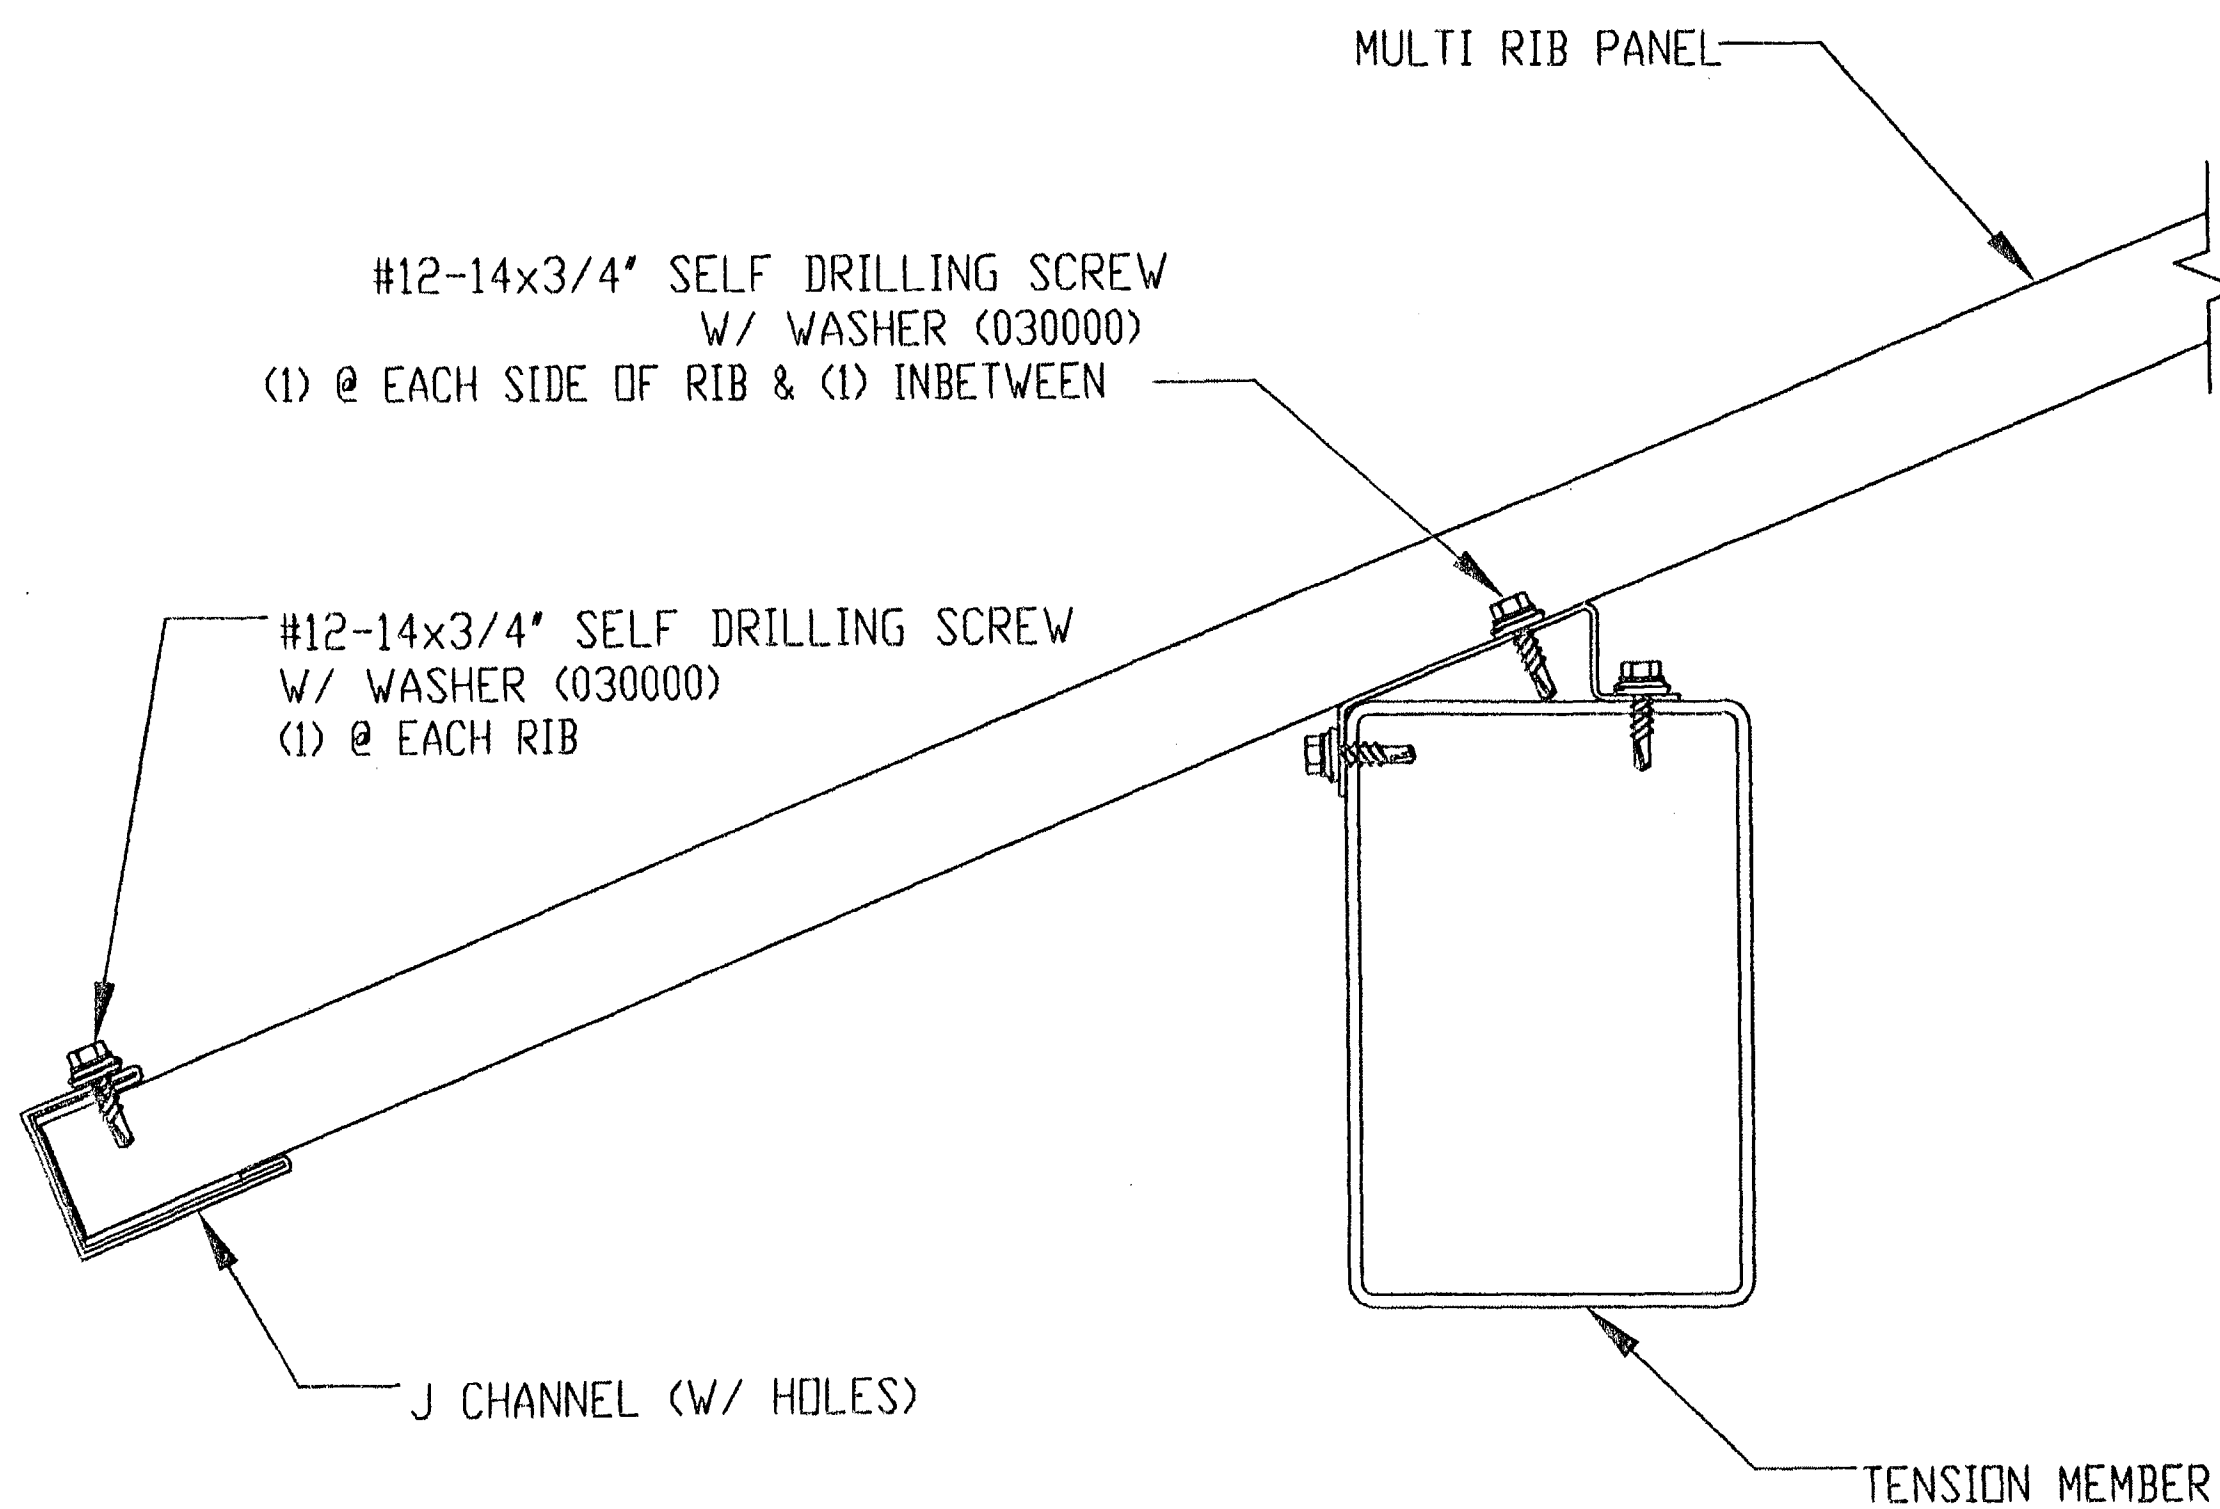

SECTION @ TENSION MEMBER

MR-100

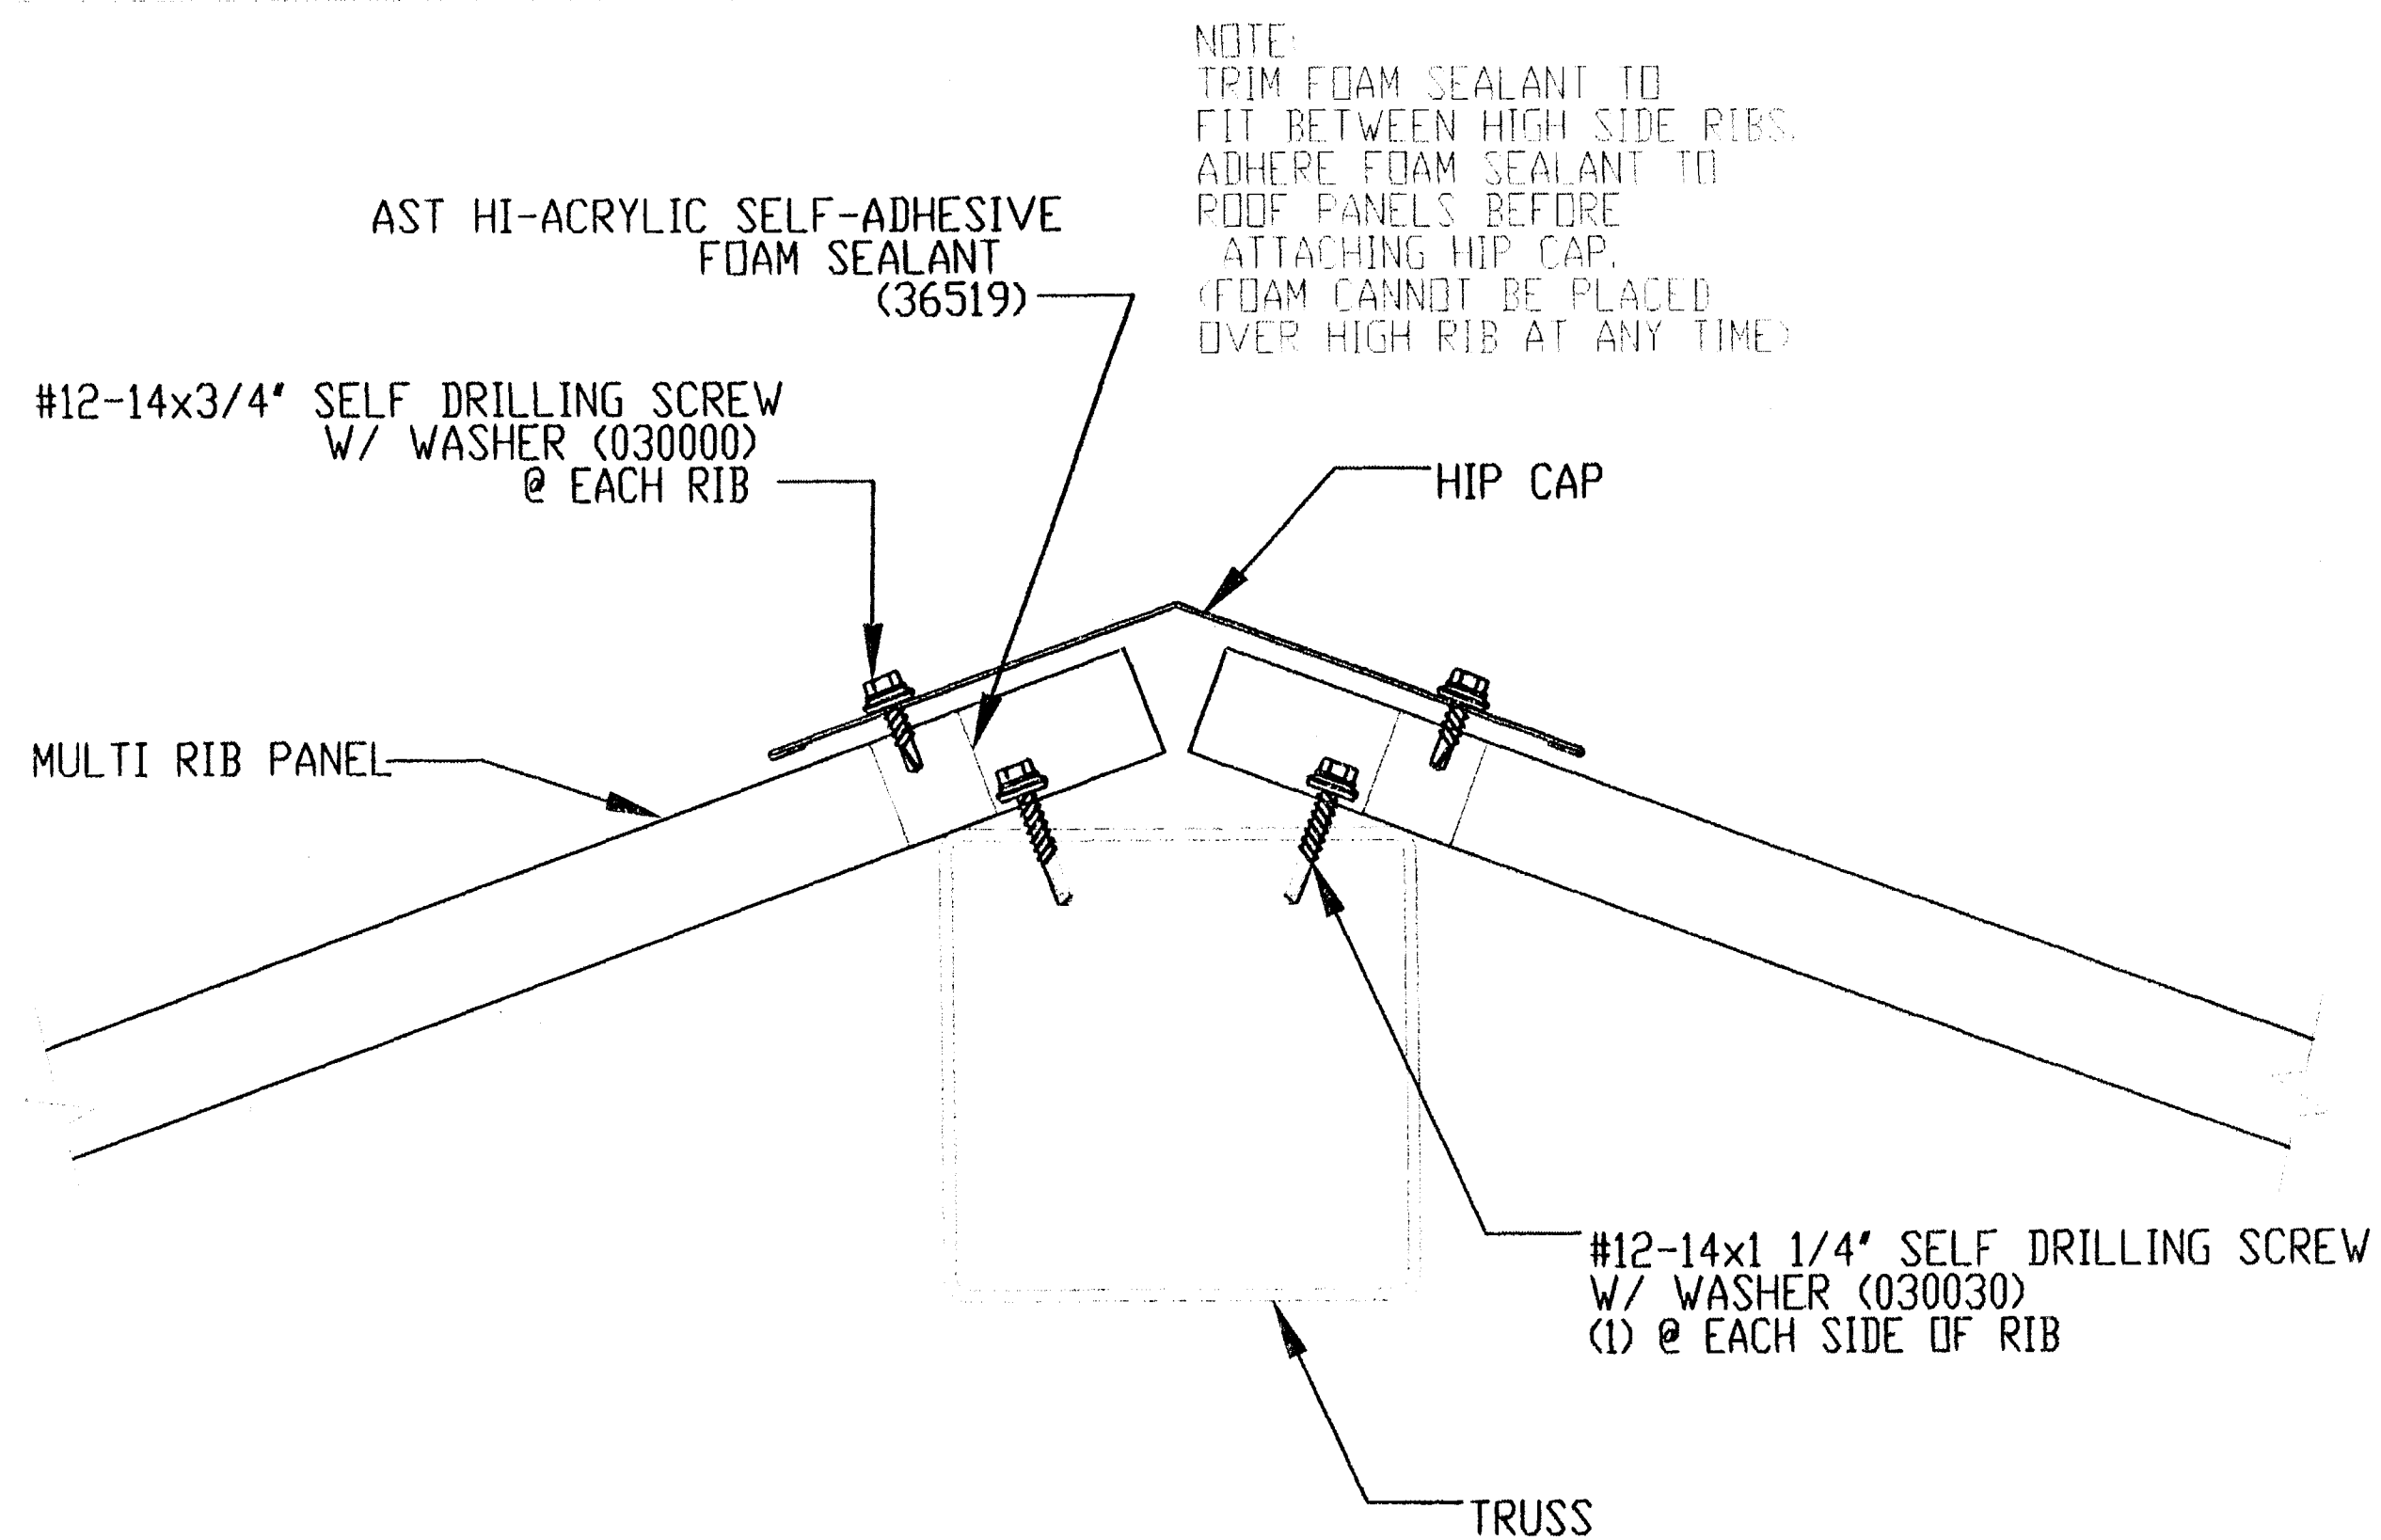

SECTION @ TRUSS

MR-300

NOTE:
ATTACH ROOF PEAK CAP TO RIBS &
RIDGE CAP WITH #12-14x3/4" SELF
DRILLING SCREW. (030000)

030000
#12-14x3/4" SELF DRILLING SCREW.

030030
#12-14x1 1/4" SELF DRILLING
SCREW.
(NOTE: USE ONLY TO FASTEN ROOF
AT THE RIDGE TO THE TRUSS OR
RIDGE BEAM.)

030105
1/8"x" POP RIVET
USE TO ATTACH THE COVER
PLATES.

NOTE:
ALL MATERIALS ARE CALLED
OUT ON SHEET 4.

PATENTED AND/OR PATENTS PENDING COPYRIGHT 2006 PORTER CORP HOLLAND, MI 49424

PROJECT: SANDHILL OWEN PARK & TRAILHEAD

PROJECT LOCATION: HENDERSON, NV 89074

DRAWING: ROOF CONNECTION DETAILS

CREATION DATE: 5/27/2009

DRAWN BY: jerdre

REV LEVEL: A

SCALE: 1:1

800-354-7721
WWW.POLYGON.COM

by PORTER CORP
PORTER CORP 4240 N. 136th AVE HOLLAND, MI 49424

SHEET

PR.19

THIS SEAL PERTAINS ONLY TO THE MATERIALS SUPPLIED BY POLYGON.
THIS SEAL DOES NOT SERVE AS - OR REPRESENT - THE PROJECT
ENGINEER OF RECORD AND SHALL NOT BE CONSTRUED AS SUCH.