


1. Suggested gas line locations are to clear substructures. Locate in the Field.
2. All pipeline construction shall conform to applicable jurisdictional specifications.
3. Gas mains shall be purged per the Operations Manual.
4. Do not scale this drawing.
5. Any changes in the Main location must be authorized by SWG Engineer.
6. "CAUTION: HIGH PRESSURE GAS! Call Southwest Gas at 702-365-2111 48 hours in advance for Standby when excavating over or near High Pressure Gas lines.

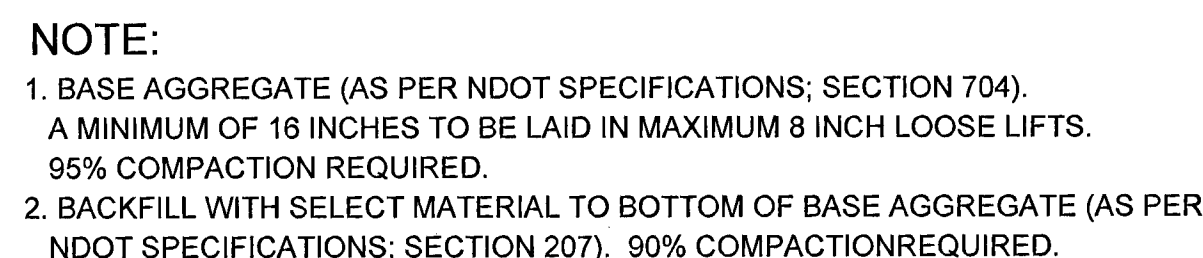

NTS
METHOD OF PATCHING ROADWAY
WHERE TRENCHING IS NECESSARY FOR
UTILITY OR OTHER INSTALLATIONS
IN UNPAVED AREAS



AS-BUILT DRAWING-PRESSURE TEST DATA		
PIPE DIA. _____	TEST MEDIUM TEST METHOD	
PIPE LENGTH _____	☐ AIR	☐ GAUGE
PIPE TYPE _____	☐ NITROGEN	☐ CHART
	☐ WATER	☐ GAUGE/
	☐ SOAP	PRESS REC SN# _____
MIN. DURATION _____	START _____	END _____
TEST PRES. (PSIG) _____		
TIME _____		
DATE _____		
PERFORMED BY _____		

SYSTEM	Vegas Drive 6 4 125
DR. NO.	21DR10002373
SEGMENT M.A.O.P.	N/A
SYSTEM M.A.O.P.	120
SYSTEM M.O.P.	120

PURGE PLAN WAS COMPLETED IN ACCORDANCE
WITH THE OPERATIONS MANUAL GUIDELINES BY:

PRINT: _____ DATE: _____

SIGNATURE: _____

[illegible]