


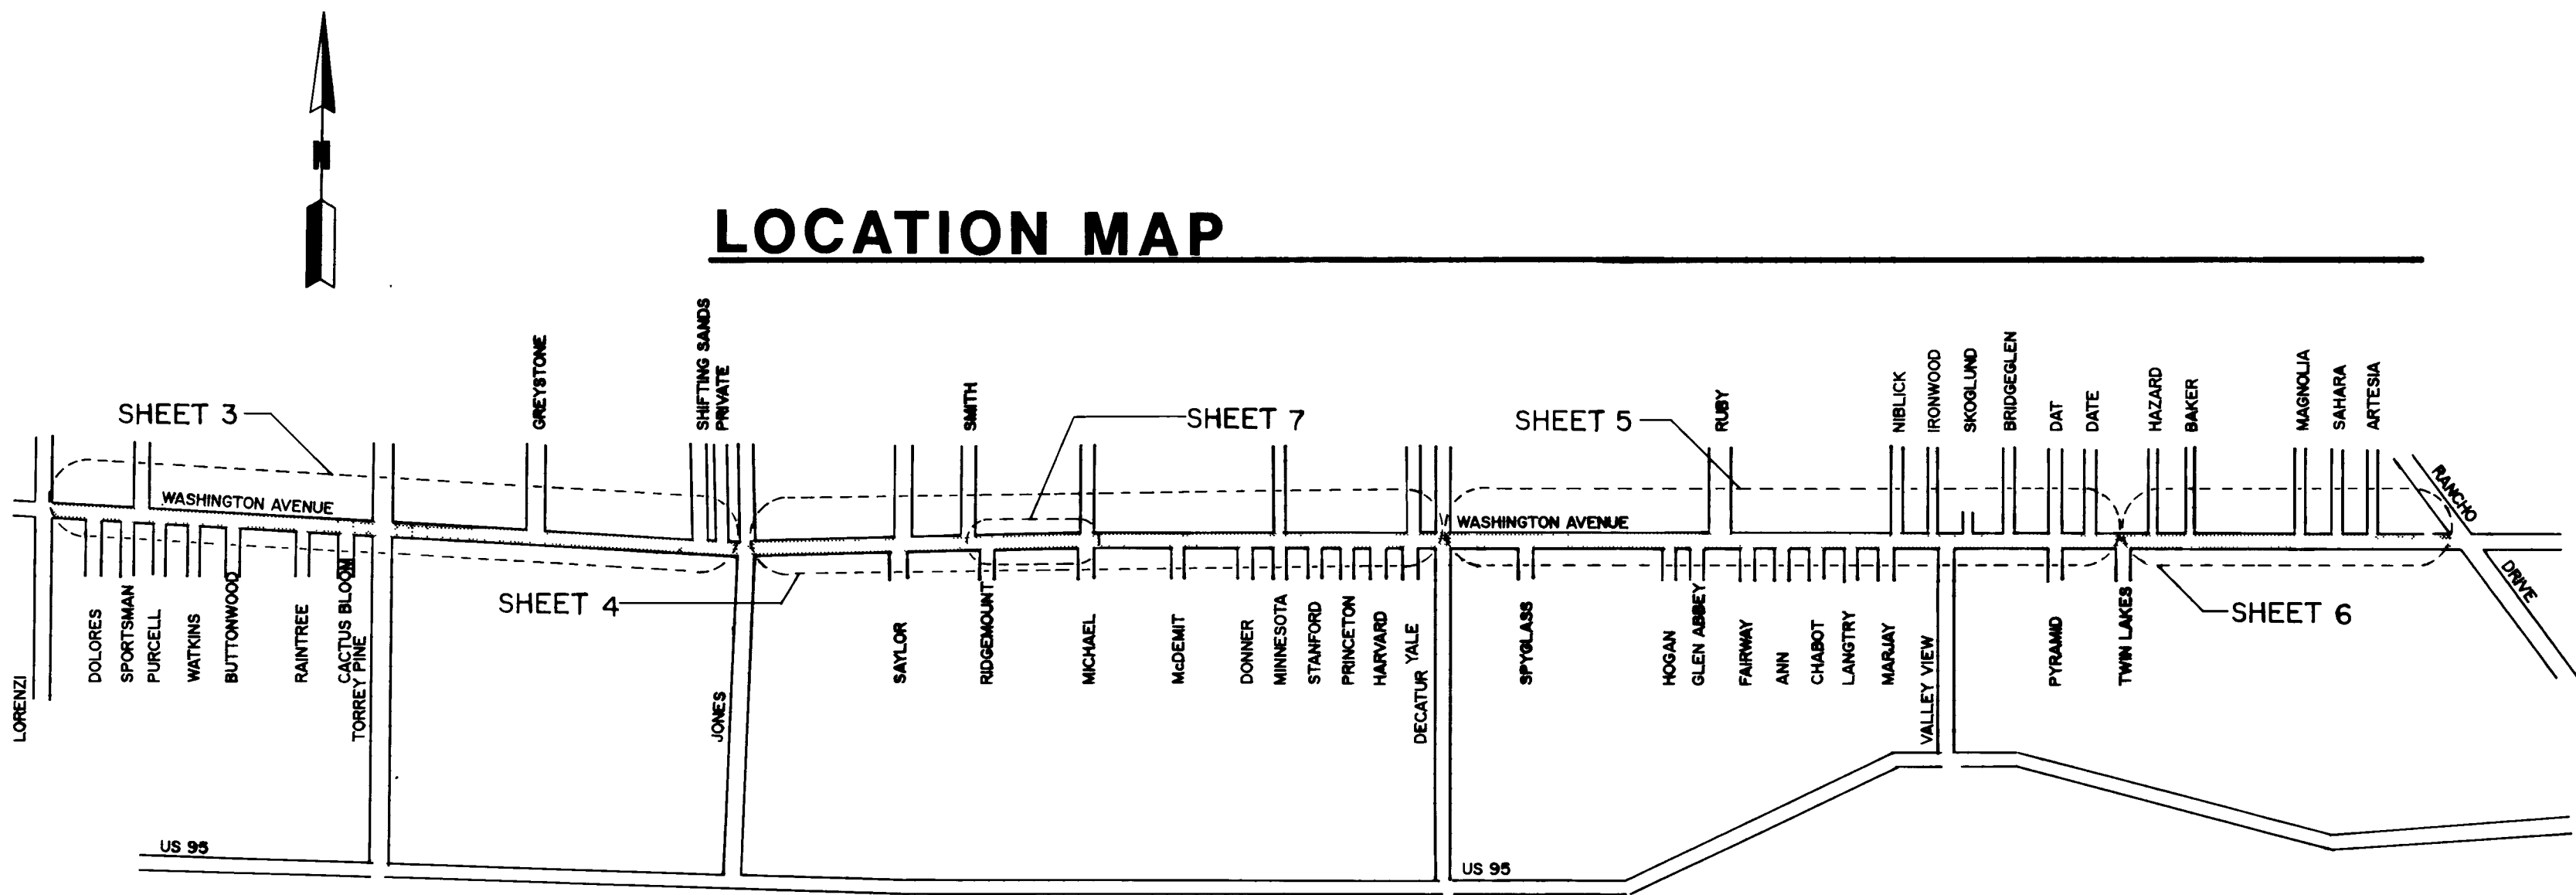

LEGEND:

CONCRETE CONSTRUCTION AREA	
1-1/2" OVERLAY ON EXISTING ASPHALT PAVEMENT.	
REMOVE AND REPLACE CONCRETE	
EXISTING CONSTRUCTION	
NEW CONSTRUCTION.	
SAWCUT EXISTING MATERIAL.	
ROTMILL A.C. PAVEMENT	

SYMBOLS:	
SEE CONSTRUCTION NOTE #	
SEE DETAIL #	
SEE SHEET #	
WATER VALVE	
MANHOLE	
TEL./PWR. POLE	
STREET LIGHT	

CONSTRUCTION NOTES:

- SAWCUT, REMOVE, AND REPLACE ASPHALT CONCRETE PAVEMENT IN AREAS INDICATED BY SHADING. SEE DETAIL SIM.
- REMOVE SIDEWALK AND CROSS GUTTER SPANDREL AND INSTALL NEW CROSS GUTTER SPANDREL AND SIDEWALK WITH WHEELCHAIR RAMP.
- REMOVE SIDEWALK AND CURB & GUTTER AS NECESSARY. INSTALL NEW CURB & GUTTER AND SIDEWALK WITH WHEELCHAIR RAMP.
- NOT USED
- EXISTING UTILITIES ARE LOCATED ON THE PLANS FOR THE CONVENIENCE OF THE CONTRACTOR ONLY. THE CONTRACTOR SHALL BEAR FULL RESPONSIBILITY FOR PROTECTION OF UTILITIES AND THE CITY BEARS NO RESPONSIBILITY FOR UTILITIES NOT SHOWN ON THE PLANS OR NOT IN THE LOCATION SHOWN ON THE PLANS.
- REMOVE ENTIRE CROSS GUTTER AND SIDEWALK FROM PC TO PT. CONSTRUCT NEW CROSS GUTTER AND SIDEWALK WITH WHEELCHAIR RAMPS. REMOVE A.C. PAVEMENT TO PT ON SIDE ST. REPLACE W/ TYPE 2 A.C.
- CONSTRUCT CROSS GUTTER, SPANDREL, AND SIDEWALK WITH WHEELCHAIR RAMPS.
- REMOVE EXISTING DRIVEWAY. CONSTRUCT DEPRESSED ALLEY DRIVEWAY.
- REMOVE AND REPLACE CONCRETE SIDEWALK. MATCH EXISTING ELEVATIONS AND SIDEWALK WIDTH UNLESS NOTED OTHERWISE.
- CONSTRUCT CONCRETE SIDEWALK AND CURB & GUTTER.
- 1-1/2" TYPE 3 A.C. OVERLAY ON EXISTING ASPHALT CONCRETE PAVEMENT WITH PAVEMENT REINFORCING FABRIC.
- REMOVE AND REPLACE CURB & GUTTER.
- CONSTRUCT 8' WIDE SIDEWALK.
- THE CONTRACTOR SHALL BE RESPONSIBLE FOR PROTECTING AND REPAIRING OR REPLACING ANY DAMAGE TO ADJACENT APPURTENANCES (i.e. CONCRETE, VALVE BOXES, MANHOLES, PULL BOXES, STREET SIGNS, STREET LIGHTS, LAWNS, SPRINKLER SYSTEMS, etc.) FROM DAMAGE DUE TO THEIR OPERATIONS.
- INSTALL TRAFFIC DETECTOR LOOPS.
- SOUTHWEST GAS CATHODIC STATIONS TO BE RELOCATED TO SIDEWALK BY SOUTHWEST GAS. CONTRACTOR TO VERIFY THIS WORK HAS BEEN COMPLETED PRIOR TO OVERLAY.
- REMOVE SIDEWALK, SAWCUT CURB & GUTTER, AND INSTALL WHEELCHAIR RAMP. SEE DETAIL SIM.
- REMOVE AND REPLACE EXISTING DRIVEWAY.

Avoid cutting underground utility lines. It's costly.

Call before you Dig.

1-800-227-2600

UNDERGROUND SERVICE ALERT (USA)

Department of Public Works


1988 1989 STREET REHABILITATION PROJECT

WASHINGTON AVENUE
LORENZI BLVD. TO RANCHO DR.



Drawing no.

2/13

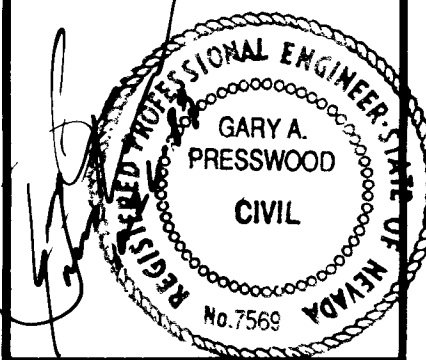

Scale (h)	N.T.S.	Scale (v)	N.T.S.	W.A.
Fid. bk. no.		Date		
Design by	D. ANDERSON	Drawn by	G. GAGNON	Date
Approved by				

Revisions

Date

